



NSW.22.004.10000/B
Revision: 00

HAWK Scheinwerferhalter-Set DUCATI Multistrada 1200 ('10 –)

HAWK Light Mount Set DUCATI Multistrada 1200 ('10 –)

Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen:

M6	9,6 Nm
----	--------

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

**Technische Änderungen vorbehalten.
Irrtümer ausgenommen.**

Mounting Instruction

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW-MOTECH takes no responsibility for damages caused by improper installation.

All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M6	9,6 Nm
----	--------

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.




Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts and nuts.

Subject to change. Not responsible for typos.

SW-MOTECH GmbH & Co. KG
Ernteweg 8/10
35282 Rauschenberg
Germany

Tel. +49 (0) 64 25/8 16 8-00
Fax +49 (0) 64 25/8 16 8-10

info@sw-motech.com
www.sw-motech.com

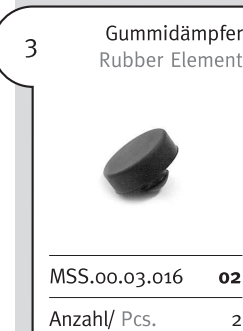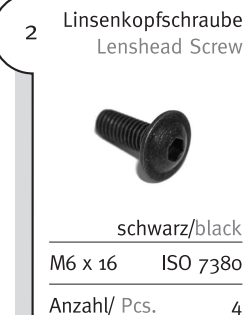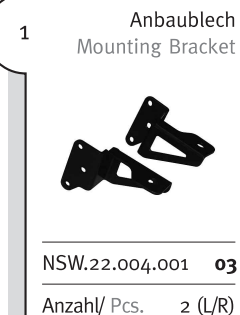

Bevor die Anbaubleche (1) montiert werden können, müssen die vorderen beiden Seitenverkleidungen demontiert werden. Lösen Sie dazu beidseitig die im Detailbild gezeigten Verbindungen. Nach erfolgter Montage der Anbaubleche (1) müssen die Verkleidungsteile wieder montiert werden.

Before attaching the mounting brackets (1) you must remove the both side covers. Loosen the marked connections at both sides of the motorcycle (shown in the detail picture below), then remove the side covers. After successful attaching of the mounting brackets (1), reattach the both side covers again.

